



Step Cable Tester

Category: Test & Measurement · Model reference: MZM-9008



SPECIFICATIONS

DESCRIPTION

A. Functions:

- Can test correspondingly double-twisted cables 1, 2, 3, 4, 5, 6, 7, 8 and G, meanwhile can judge wrong connection, short circuit and open circuit.

- NS-4688 tests BNC, RJH and RJ45; NS-468 tests RJ 11 and RJ45; NS-468N tests RJ45 and BNC, ST-248 tests RJ45 and BNC.

B. Test of double-twisted cables; Switch on the power. (Is slow and remote Tester). The lights of the main tester will turn on.

Sequent from 1 to G.

Main tester: 1-2-3-4-5-6-7-8-G

Remote tester: 1-4-3-2-5-6-7-8-G

Following are abnormal connections:

If one cable, for example cable NO. 3 is open circuited the two NO. 3 lights of the main tester and remote tester will not turn on.

If several cables are not connected, several lights will not turn on respectively. If less than two cables are connected, none of the lights is on.

If two ends of a cable is disordered, for example NO. 2 and NO. 4 then displays on:

Main tester: 1-2-3-4-5-6-7-8-G

Remote tester: 1-4-3-2-5-6-7-8-G

If two cables are short circuited, neither of the corresponding lights icon of the remote

Tester while main tester remains unchanged. If three cables, including three, are short

Circuited, none of the corresponding lights is on.

C. If test patch panels or wall plate outlets, two cables which can match each other (eg 110

P4 and RJ45) will be connected to the tester.

D. If test cables of the same axes, BNC turns on when the cable works.

Send Enquiry **Your Name**

Your Email

Tele Phone

